


Theatre to Control Room Intercom System – Pulse

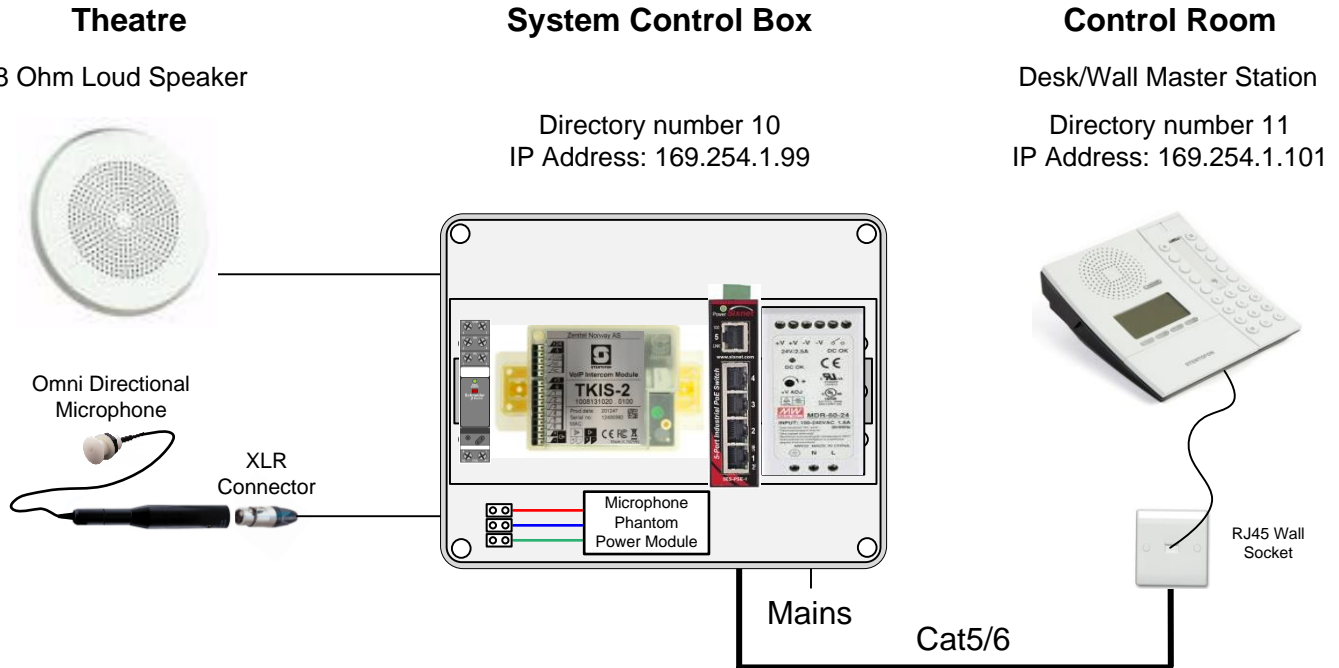

Installation

Desk/wall station should be mounted with easy access to controls.
System Control Box can be mounted in the control room with access for maintenance if required.
Cable between Desk/wall Station and the System Control Box is CAT5 cable.
Cable for microphone should be microphone cable, 2 core plus Screen.
The speaker requires 2 core speaker cable.

Recommendations

Microphone must be fitted where it can pickup speech and not equipment noise.
Loudspeaker and Microphone must be spaced so that there is no Feedback, More than one metre apart.

Operation

To communicate with the Theatre, Dial "10", then press and hold the "M" key to talk to the patient, let go to return to listen mode.

Patient in the theatre, cannot hear operator without the "M" key is being pressed.

Close System

To cancel all communications (Switch OFF) press key "C".

Theatre to Control Room Intercom System – Pulse

